


Washing Machine Instruction Manual

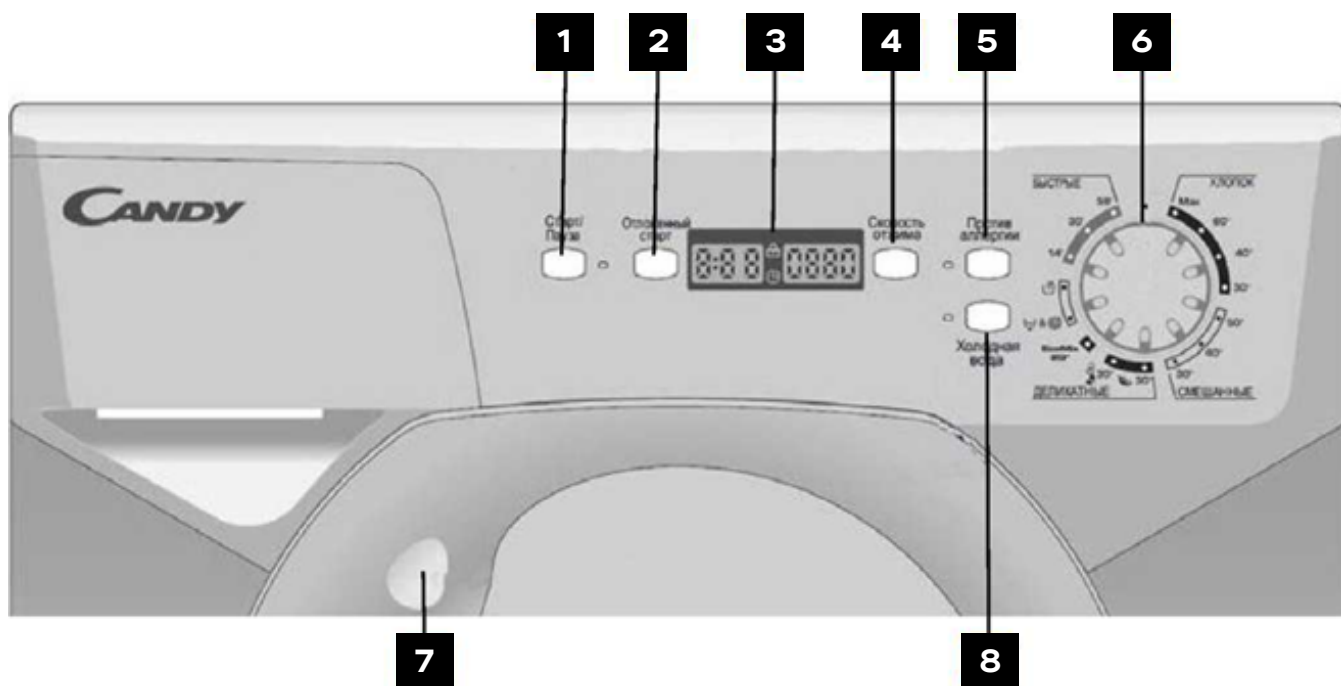

CONTROL PANEL AND DISPLAY

1. **Start/Pause** button
2. **Delayed Start** additional function button
3. Display
4. **Spin Speed** selection button
5. **Anti-Allergy** Button
6. Cycle selector, with an **OFF** mark
7. Door handle
8. **Cold Water** button

SELECT CYCLE

1. Set the cycle selector to the cycle you need.
2. To set the cycle depending on your individual needs, you can change the spin speed and the washing temperature.
3. Press the (Start/Pause) button

ACTIVATE DELAYED START FUNCTION

The Delayed Start washing function allows you to set the washing to commence at the time most convenient for you.

Steps:

1. Close the washing machine door.
2. Set the cycle selector to the cycle you need (see the cycle table below).
3. Select additional functions as desired or change the washing parameters.
4. Press Delayed Start.
5. Program the delay time within the 0-24 hour range.
Time from 00:00 to 24:00 will be displayed.
6. Press the Start/Pause button. The washing machine will switch to the standby mode. Washing will start automatically after the programmed delay time has elapsed.

END OF WASHING

1. After the washing is finished, the display will show the word “End”, and there will be a sound signal (if it is active).
2. Turn off the washing machine by pressing the Standby button.
3. Open the drum door and take out the items.

CANCEL OR CHANGE CYCLE

To stop the cycle, press the Standby button.

Then turn on the washing machine again, select the desired wash cycle and press Start/Pause

POWER-SAVING DISPLAY MODE

10 minutes after the end of the cycle, the display switches to the power-saving mode (instead of “End”, the display will flash “:”)

The power-saving mode will also activate if, after turning on the washing machine with the Standby button, the cycle selector is not moved, or no button is pressed for 10 minutes.

WASH CYCLES

Wash cycle		Cycle selector position	Max, per load, kg (see panel)		Temperature [°C]	Detergent loading	
			3.5	4			
<u>Hard-wearing fabrics</u> Cotton, flax	White fabrics	Max	3.5	4	75°	•	•
Cotton, mixed fabrics	Coloured fade-resistant fabrics	60° **	3.5	4	60°	•	•
	Coloured fade-resistant fabrics	40° **	3.5	4	40°	•	•
	Coloured fading fabrics	30°	3.5	4	30°	•	•
<u>Blended and synthetic fabrics</u> Synthetic fabrics (nylon, perlon)	Coloured fade-resistant fabrics	50°	2	2	50°	•	•
	Coloured fading fabrics	40°	2	2	40°	•	•
Blended, synthetic delicate	Shirts	30°	2	2	30°	•	•
<u>Very delicate fabrics</u>	Delicate fabrics	30°	2	2	30°	•	•
	Wool labelled with the "Machine Wash" symbol, Hand Wash cycle	30°	1	1	30°	•	•
Special	EcoMix 20°	EcoMix 20°	3.5	4	20°	•	•
	Drain and spin		-	-	-		
	Rinsing		-	-	-		•
	Hard-wearing and blended fabrics	14'	1	1	30°	•	•
	Hard-wearing and blended fabrics	30'	2	2	30°	•	•
	Hard-wearing fabrics	59'	3	3	40°	•	•

