




Washing Machine Instruction Manual


CONTROL PANEL



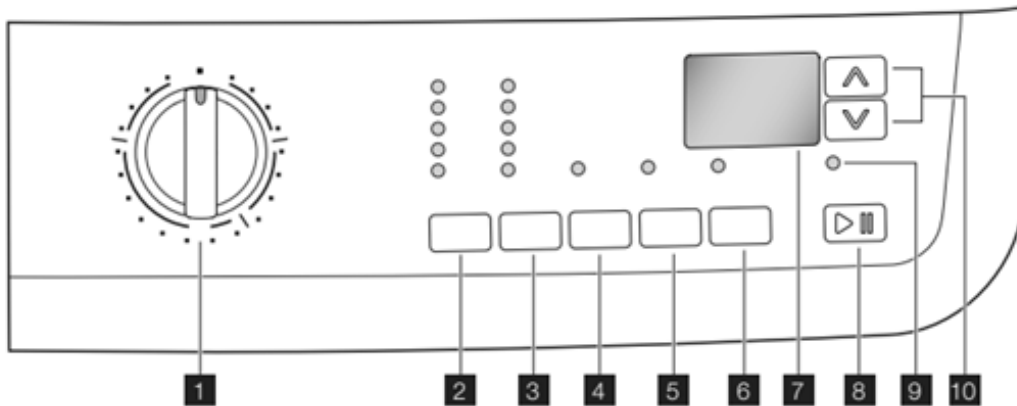


- 1** Cycle Selector
- 2** TEMPERATURE button
- 3** SPIN SPEED REDUCTION button
 - No spin
 - Stop with water in the drum
- 4** EXTRA RINSE button
- 5** DRYING TIME button
- 6** DELAYED START button
- 7** Display
- 8** START/PAUSE button
- 9** Door locking indicator
- 10** TIME MANAGER function buttons

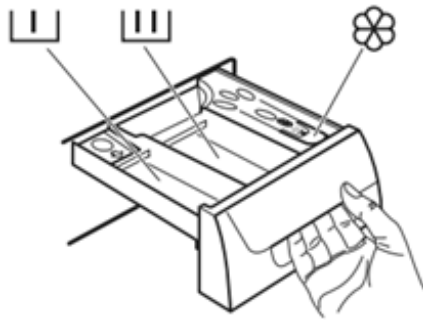

DETERGENT DISPENSER



-  for detergent used for pre-washing and soaking, or stain remover
-  compartment for powder or liquid detergent used for basic washing
-  compartment for liquid additives (conditioner)

LOAD THE LAUNDRY, SELECT THE WASH MODE

- put the laundry in the drum and close the door
 - pull out the detergent dispenser and add the required amount of detergent into the main wash compartment
 - if necessary, add laundry softener into the liquid additives compartment and slide back the dispenser
 - turn the cycle selector (1) to the desired wash cycle. The machine will suggest the temperature and automatically select the maximum spin speed corresponding to the cycle preset. You can change these values by pressing the relevant buttons. Then the green indicator on button 8 will start flashing.
- You can rotate the cycle selector both clockwise and counter clockwise. To cancel a cycle/turn off the machine, set the cycle selector to the “○” position. You can select a new cycle.

LAUNCH THE CYCLE SELECTED

- to launch the cycle selected, press button 8, the green indicator of button 8 will stop flashing




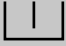 



CYCLE INTERRUPTION

- to interrupt the running cycle, press button 8, and the corresponding indicator will start flashing. To resume the cycle, press this button again.

AT THE END OF THE CYCLE

- the washing machine will stop automatically. Three flashing symbols 0.00 will appear on the display, and the button 8 indicator will go out. A signal will sound. After a while, the door will be unlocked.

AT THE END OF THE CYCLE, TURN THE CYCLE SELECTOR TO THE “○” POSITION TO TURN OFF THE MACHINE

CYCLE Max. and min. temperature Cycle description Maximum spin speed Maximum load Type of underwear	Modes	Detergent compartment
COTTON  90° – Cold wash Basic wash – rinse Max. spin speed 1,400 rpm Max load 7 kg – Small load 3 kg ¹⁾ White and coloured cotton (typical contamination).	SPIN STOP WITH WATER IN THE DRUM, NO SPIN, EXTRA RINSE TIME MANAGER	
COTTON + PRE-WASH WASH  +  90° – Cold wash Pre–wash – basic wash – rinse Max. spin speed 1,400 rpm Max. load 7 kg – Small load 3 kg ¹⁾ . White or coloured cotton with pre-wash (heavily soiled items).	SPIN STOP WITH WATER IN THE DRUM, NO SPIN, EXTRA RINSE TIME MANAGER	
SYNTHETICS  60° – Cold wash Basic wash – rinse Max. spin speed 900 rpm Max. load 3 kg – Small load 1.5 kg ¹⁾ Items of synthetic or mixed fabrics: underwear, coloured underwear, shrink-resistant dress shirts, blouses.	SPIN STOP WITH WATER IN THE DRUM, NO SPIN, EXTRA RINSE TIME MANAGER	



CYCLE

Max. and min. temperature

Cycle description

Maximum spin speed

Maximum load

Type of underwear

Modes

Detergent compartment

DELICATE ITEMS

40° – Cold wash Main wash – rinse
Max. spin speed 700 rpm
Max. load 3 kg – Small load 1.5 kg 1)
Delicate fabrics – acrylic, viscose,
polyester.

STOP WITH WATER IN THE DRUM,
NO SPIN, EXTRA RINSE
TIME MANAGER



SYNTHETICS. EASY IRONING

60° – Cold wash
Basic washing – rinsing
Max. spin speed 900 rpm
Max. load is 1 kg
For items made of synthetic and mixed
fabrics, which then need to be ironed.
When choosing this cycle, the washing
and spinning are done gently to avoid
creasing. This makes ironing easier. In
addition, the machine performs extra
rinses.

SPIN
STOP WITH WATER IN THE DRUM,
NO SPIN, EXTRA RINSE



SPIN

Drain water and long spin
Max. spin speed 1400 rpm
Max. load 7 kg
Special spin mode for hand-washed
laundry, and at the end of the cycles
with the functions “Stop with water in
the tank” and “No spin”. With the
corresponding button, adjust the
spin speed depending on the type of
laundry.

SPIN

DRAIN

Draining water
Max. load 7 kg
It is used to drain the water after the
last rinse in cycles with the selected
function “Stop with water in the tank”.

RINSE

Rinse
Max spin speed is 1400 rpm
Max. load 7 kg
This cycle allows you to rinse and
spin hand-washed cotton items. The
washing machine performs 3 rinses,
followed by a final prolonged spin. By
pressing the appropriate button,
decrease the spin speed.

SPIN
STOP WITH WATER IN THE DRUM,
NO SPIN, EXTRA RINSE



CYCLE

Max. and min. temperature

Cycle description

Maximum spin speed

Maximum load

Type of underwear

Modes

Detergent compartment

SILK



30°

Basic wash – rinse

Max. spin speed is 700 rpm

Max. load 1 kg

A gentle washing cycle for products made of silk and blended synthetic fabrics.

STOP WITH WATER IN THE DRUM,
NO SPIN



HAND WASH



40° – Cold wash

Basic wash – rinse

Max. spin speed 900 rpm

Max. load 2 kg

A special cycle for washing items that require gentle care, with the “hand wash” symbol on the label

SPIN
STOP WITH WATER IN THE
DRUM, NO SPIN



WOOL



40° – Cold wash

Basic wash – rinse

Max. spin speed 900 rpm

Max. load 2 kg

This is a cycle for wool items, for machine or hand wash, as well as for delicate fabrics wash. Note: if you have to wash one bulky item, the machine may become unbalanced. If the machine does not perform the final spin, add the laundry, redistribute the laundry in the drum manually and set the spin cycle.

SPIN
STOP WITH WATER IN THE
DRUM, NO SPIN



ECO COTTON



90° – 40°

Basic wash – rinse

Max. spin speed 1,400 rpm

Max. load 7 kg

White and fade-resistant cotton underwear

Select this cycle to wash cotton items with normal and low level of contaminations. Wash time will be increased, and the washing temperature will be reduced. This will give you good results and help save power

SPIN
STOP WITH WATER IN THE
DRUM, NO SPIN, EXTRA
RINSE



Drying cycles



Cotton drying



Synthetics drying