





## Guidelines for the stove



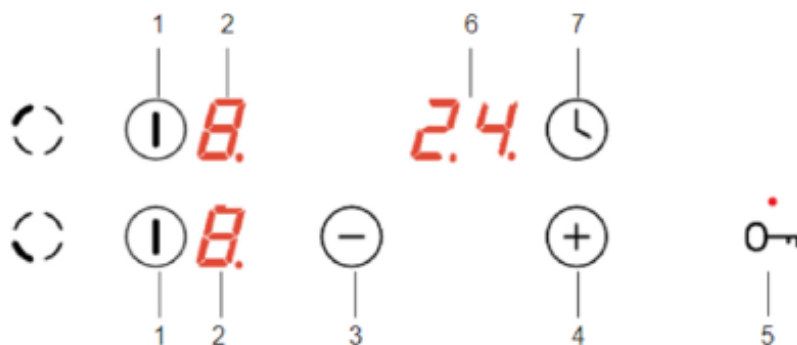


### Touch panel menu

1. Main sensor
2. Heating panel indicators
3. Sensor «Minus»
4. Sensor «Plus»
5. Sensor «Key» with blockade indicator
6. Clock indicator
7. Clock sensor

### Switching on the cooker


To switch on the cooker, first deactivate the sensor lock by pressing the touch button  for 3 seconds.

Then, by touching the sensor , switch on the cooker and the chosen heating panel. Number «0» will appear on the active zone indicator for 10 seconds.

Now you may set the required heat rate with the help of  and  sensors.



## Guidelines for the cook surface

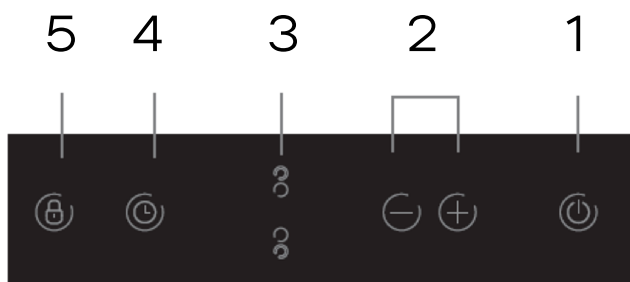

1. ON/OFF button
2. Power selection and timer buttons
3. Heating panel selection button
4. TIMER button
5. LOCK button

## Switching on the cook surface

1. Touch **ON/OFF button**. All indicators will light up «-».
2. If it does not happen, it means that the cook surface is locked. In that case press the lock button and hold it for 3 seconds. Then repeat item 1.
3. Touch the button of the relevant heating panel, which you want to select. An indicator will light up next to the button.
4. Select the power level by touching «-» or «+» power selection buttons.

## Switching off the cook surface

1. Touch the button of the relevant heating panel to select it for switching off.
  2. Switch off the heating area by pressing the power selection button until the value reaches «0» or by pressing the buttons simultaneously.
  3. Switch off the cook surface by pressing **ON/OFF** button on the control panel.
- «H» indicator shows that the working area is still hot. When it cools off, the indicator will be out. Residual heat saves energy: you may warm up a pan or a saucepan on it.